

EVOLUTION 202/222 RS232 Commands

COMMAND	RS-232 COMMAND
Menu Commands	
Up	UPZ
Down	DWNZ
Menu	MENZ
Enter	ENTZ
Auto-Status Commands	
Disable Auto Status	ASTDZ
Enable Auto Status	ASTEZ
Get Status	STAZ
Device Select Commands	
Select S1	SS1MZ
Select S2	SS2MZ
Select S3	SS3MZ
Select B1	SB1MZ
Select B2	SB2MZ
Select C1	SC1MZ
Select C2	SC2MZ
Tape Monitor Toggle	TTMZ
Tape Monitor On	TMNZ
Tape Monitor Off	TMFZ
Level Commands	

Up	UPZ
Down	DWNZ
Volume Up by 10	V10UZ
Volume Down by 10	V10DZ
Volume to Zero	V000Z
Set Volume to Specified (xxx) Level	xxxMVLZ
Mute Toggle	MUTGZ
Mute Enable	MUTZ
Mute Disable	UMTZ
Power Commands	
Power On	1PWRZ
Power Off	0PWRZ
Power Toggle	PWRZ
Trigger Commands	
Trigger-1 (OFF)	TG1FZ
Trigger-1 (ON)	TG1NZ
Trigger-2 (OFF)	TG2FZ
Trigger-2 (ON)	TG2NZ
Miscellaneous Commands	
Balance Enable (Then use Up and Down)	BALZ
Phase Invert	PHIZ
Phase Normal	PHNZ
Phase Toggle	PHTZ